



## Hitch Instructions

1. Remove the rear axle nut from the left side of the axle (i.e., side opposite the chain). Mount the hitch over the end of the axle or skewer and re-install the nut (Fig. 1A). Put the clear plastic frame protector over the left chainstay. Put a band clamp loosely over the protector. Slide the hooked end of the hitch strut between the band clamp and protector and tighten the clamp (Fig. 1B). Tighten the two screws on the lower end of the hitch using a screwdriver and 10 mm or adjustable wrench (Fig. 1C).

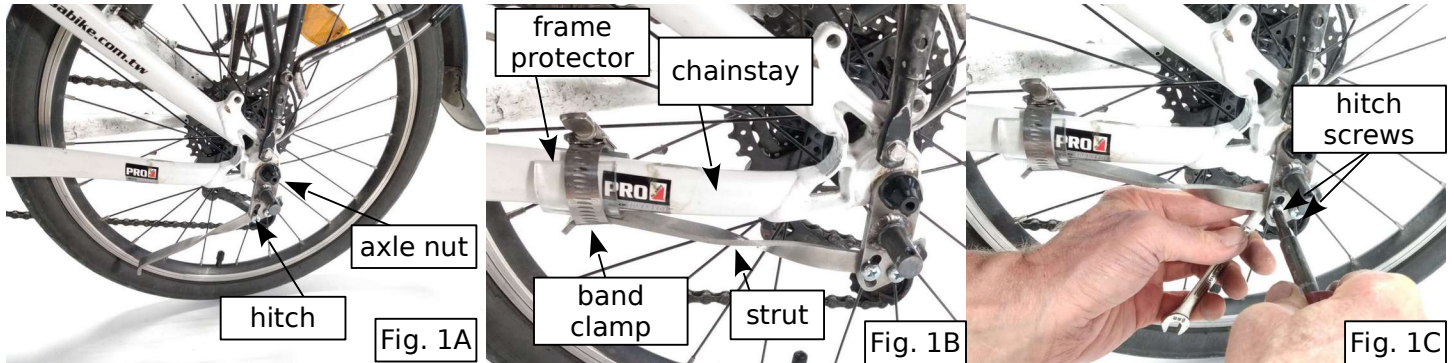

2. To attach the trailer to the hitch, slide the bushing of the swivel joint over the hitch pin (Fig. 2A). Insert the long end of the bow-tie clip on the leash on the end of the towbar into the hole on the top side of the hitch pin (Fig. 2B) and push the bow-tie clip down through the mounting hole until it snaps in place (Fig. 2C).

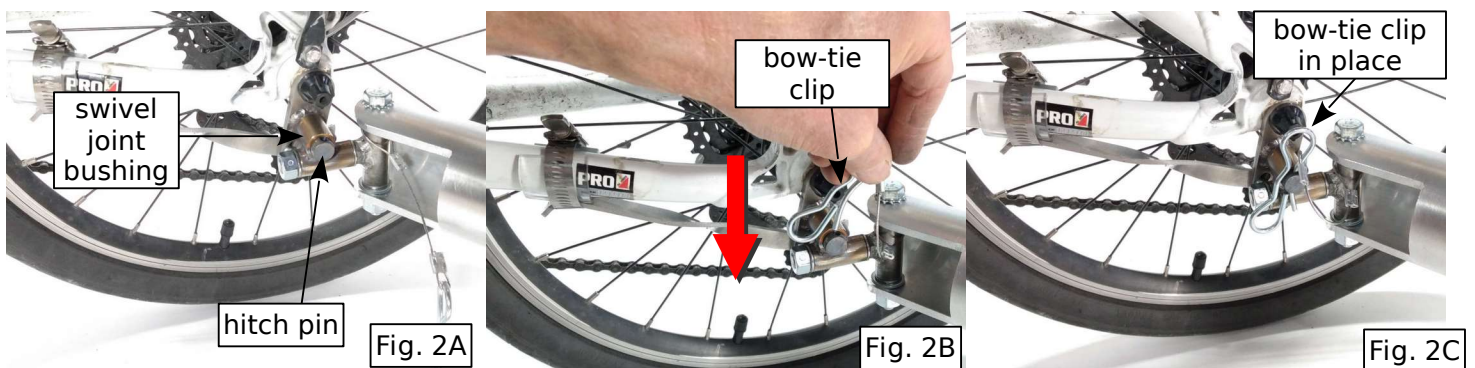

3. To remove the trailer from the hitch, pull the bottom of the bow-tie clip forward with your finger until it clears the hitch pin and push upwards from the bottom on the clip until the clip is out of the hole (Fig. 3).

