

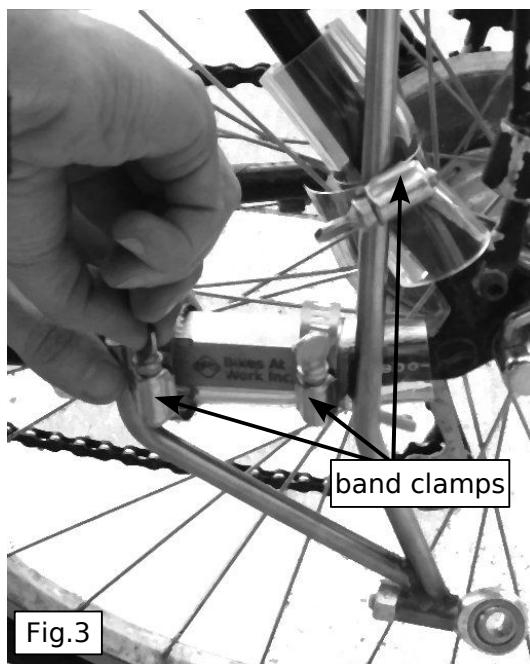
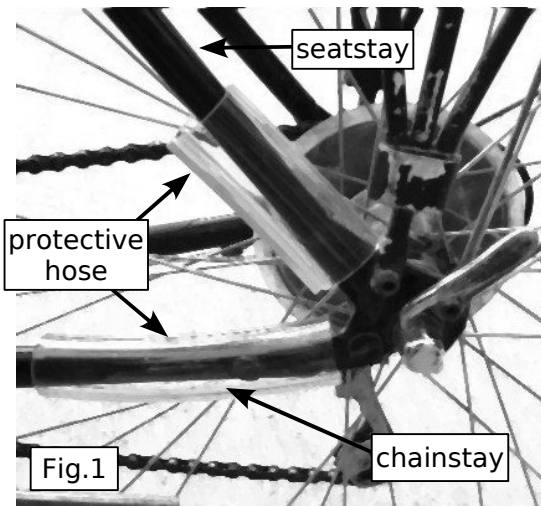


Hitch Mounting Instructions

1. Place the protective hose over the seatstay and chainstay tubes (Fig 1). The longer piece of hose should be placed on the chainstay and the shorter hose on the the seatstay. (For best fit, you may want to trim the hose with scissors so that the ends do not overlap.)
2. Set the hitch on the protective hose on the chainstay near the junction of the seatstay and chainstay (Fig. 2).
3. Wrap a band clamp around each end of the angle and chainstay so the excess end of the clamps point up and inward (Fig 3.). Tighten loosely. Put the remaining band clamp around both the vertical rod and seatstay. Tighten all band clamps securely.
4. If you plan to use the hitch only on this bike, you can break off any excess band clamp remaining by grasping the end with your fingers and bending it back and forth for about one minute until it breaks off.

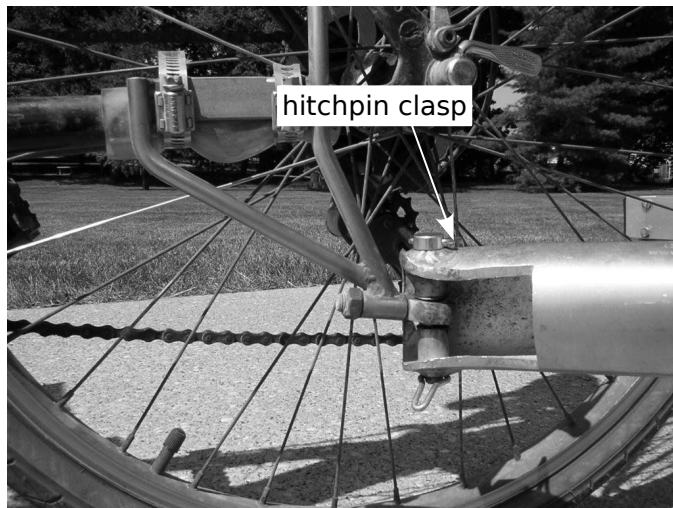

Attaching the Trailer to the Hitch

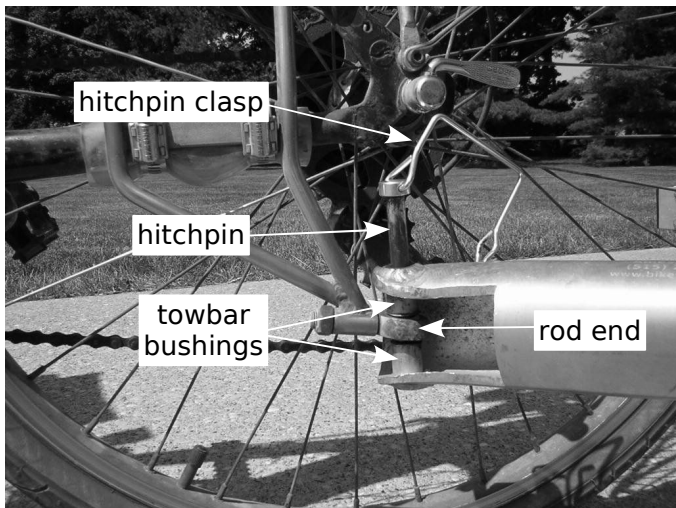

Place the towbar bushings on both sides of the ball of the rod end. Line up the holes so the hitchpin can fit down through the bushings and rod end. Take the hitchpin clip and swing it around behind the solid part of the towbar and stretch the clasp so it goes around the bottom end of the pin. You are now ready to use your trailer.